

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTRUCTION SHEET NO.

IS:40616

R0194

Page 1 of 2

INSTRUCTIONS FOR INSTALLATION OF A.D.A. TRIO FIXTURES.

COVERS FIXTURES: 40616WH, 40616WHE1, 40616WHE2, 40616WHN1, 40616WHH1, 40616WHN2, 40616SB, 40616SBE1, 40616SBE2, 40616SBN1, 40616SBH1, 40616SBN2, 40616SC, 40616SCE1, 40616SCE2, 40616SCN1, 40616SCH1 AND 40616SCN2

NOTE: This instruction sheet covers both compact fluorescent and incandescent type fixtures. Although illustration shows compact fluorescent version, the incandescent version assembles and installs the same.

BACKPLATE INSTALLATION:

1. Loosen two MOUNTING SCREWS in LOWER MOUNTING BRACKETS and remove DIFFUSER ASSEMBLY by pulling DIFFUSER ASSEMBLY away from LOWER MOUNTING BRACKETS and unhooking ASSEMBLY from two UPPER MOUNTING BRACKETS (Fig. 1, Fig. 2 and Fig. 3).
2. Thread CROSSBAR MOUNTING SCREWS into CROSSBAR as shown in Fig. 1.
3. Using appropriate slots in CROSSBAR, secure CROSSBAR to OUTLET BOX using OUTLET BOX SCREWS (provided with OUTLET BOX).
4. While supporting BACKPLATE make connections: black fixture lead or fixture lead without tracer marks to hot (black) supply lead; white fixture lead or fixture lead with tracer marks to neutral (white) supply lead. Uninsulated fixture wire is a ground wire and must be connected to grounding terminal or connections back into OUTLET BOX.
5. Position BACKPLATE over CROSSBAR allowing CROSSBAR MOUNTING SCREWS to come through holes in BACKPLATE.
CAUTION: Make certain wires are not pinched between parts.
6. Secure BACKPLATE by installing two BATTERY NUTS over CROSSBAR MOUNTING SCREWS and tighten.
7. Install recommended lamp(s).

CAUTION: MAXIMUM WATTAGE AS MARKED ON FIXTURE MUST NOT BE EXCEEDED.

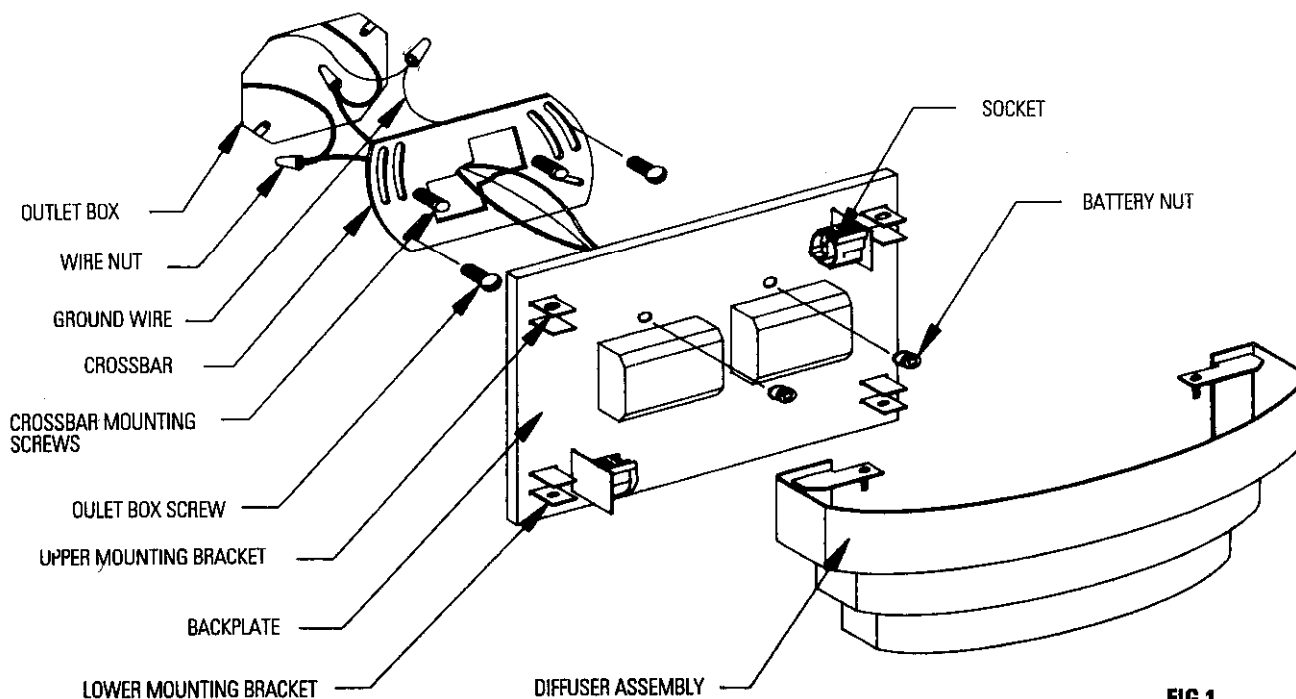


FIG.1

LIGHTOLIER®

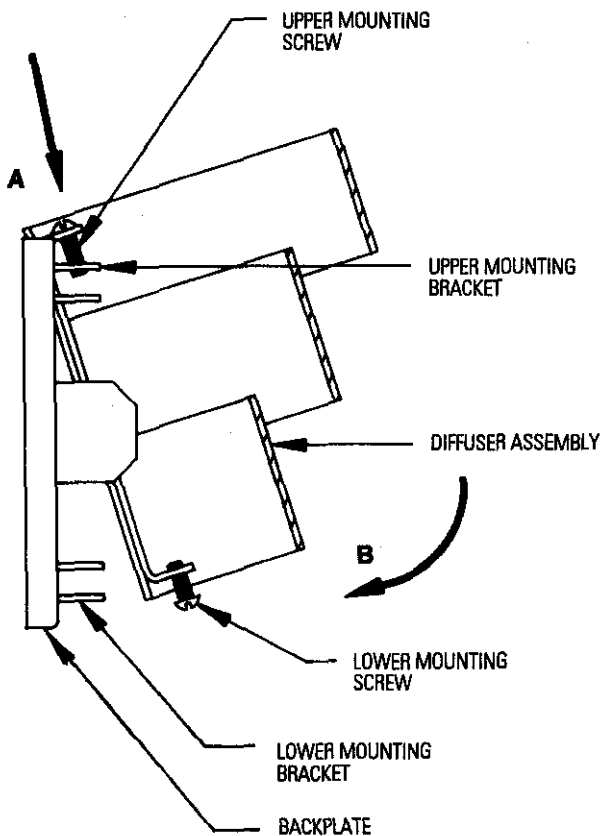
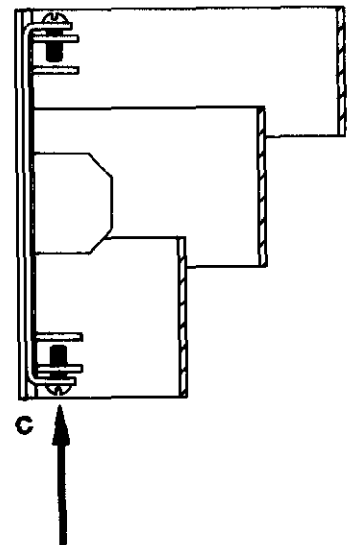
SECAUCUS, NEW JERSEY 07096
MONTREAL, QUEBEC, CANADA

INSTRUCTIONS FOR INSTALLATION OF A.D.A. TRIO FIXTURES.

COVERS FIXTURES: 40616WH, 40616WHE1, 40616WHE2, 40616WHN1, 40616WHH1, 40616WHN2, 40616SB, 40616SBE1, 40616SBE2, 40616SBN1, 40616SBH1, 40616SBN2, 40616SC, 40616SCE1, 40616SCE2, 40616SCN1, 40616SCH1 AND 40616SCN2

DIFFUSER INSTALLATION:

1. Hook DIFFUSER ASSEMBLY over UPPER MOUNTING BRACKETS allowing UPPER MOUNTING SCREWS to go down into holes in UPPER MOUNTING BRACKETS, swing DIFFUSER ASSEMBLY against BACKPLATE (Fig. 2).
2. Secure DIFFUSER ASSEMBLY in position by tightening two LOWER MOUNTING SCREWS into LOWER MOUNTING BRACKETS (Fig. 3).

**FIG. 2****FIG. 3**